


# PARK 3000 HYDRAULIC 1981

A

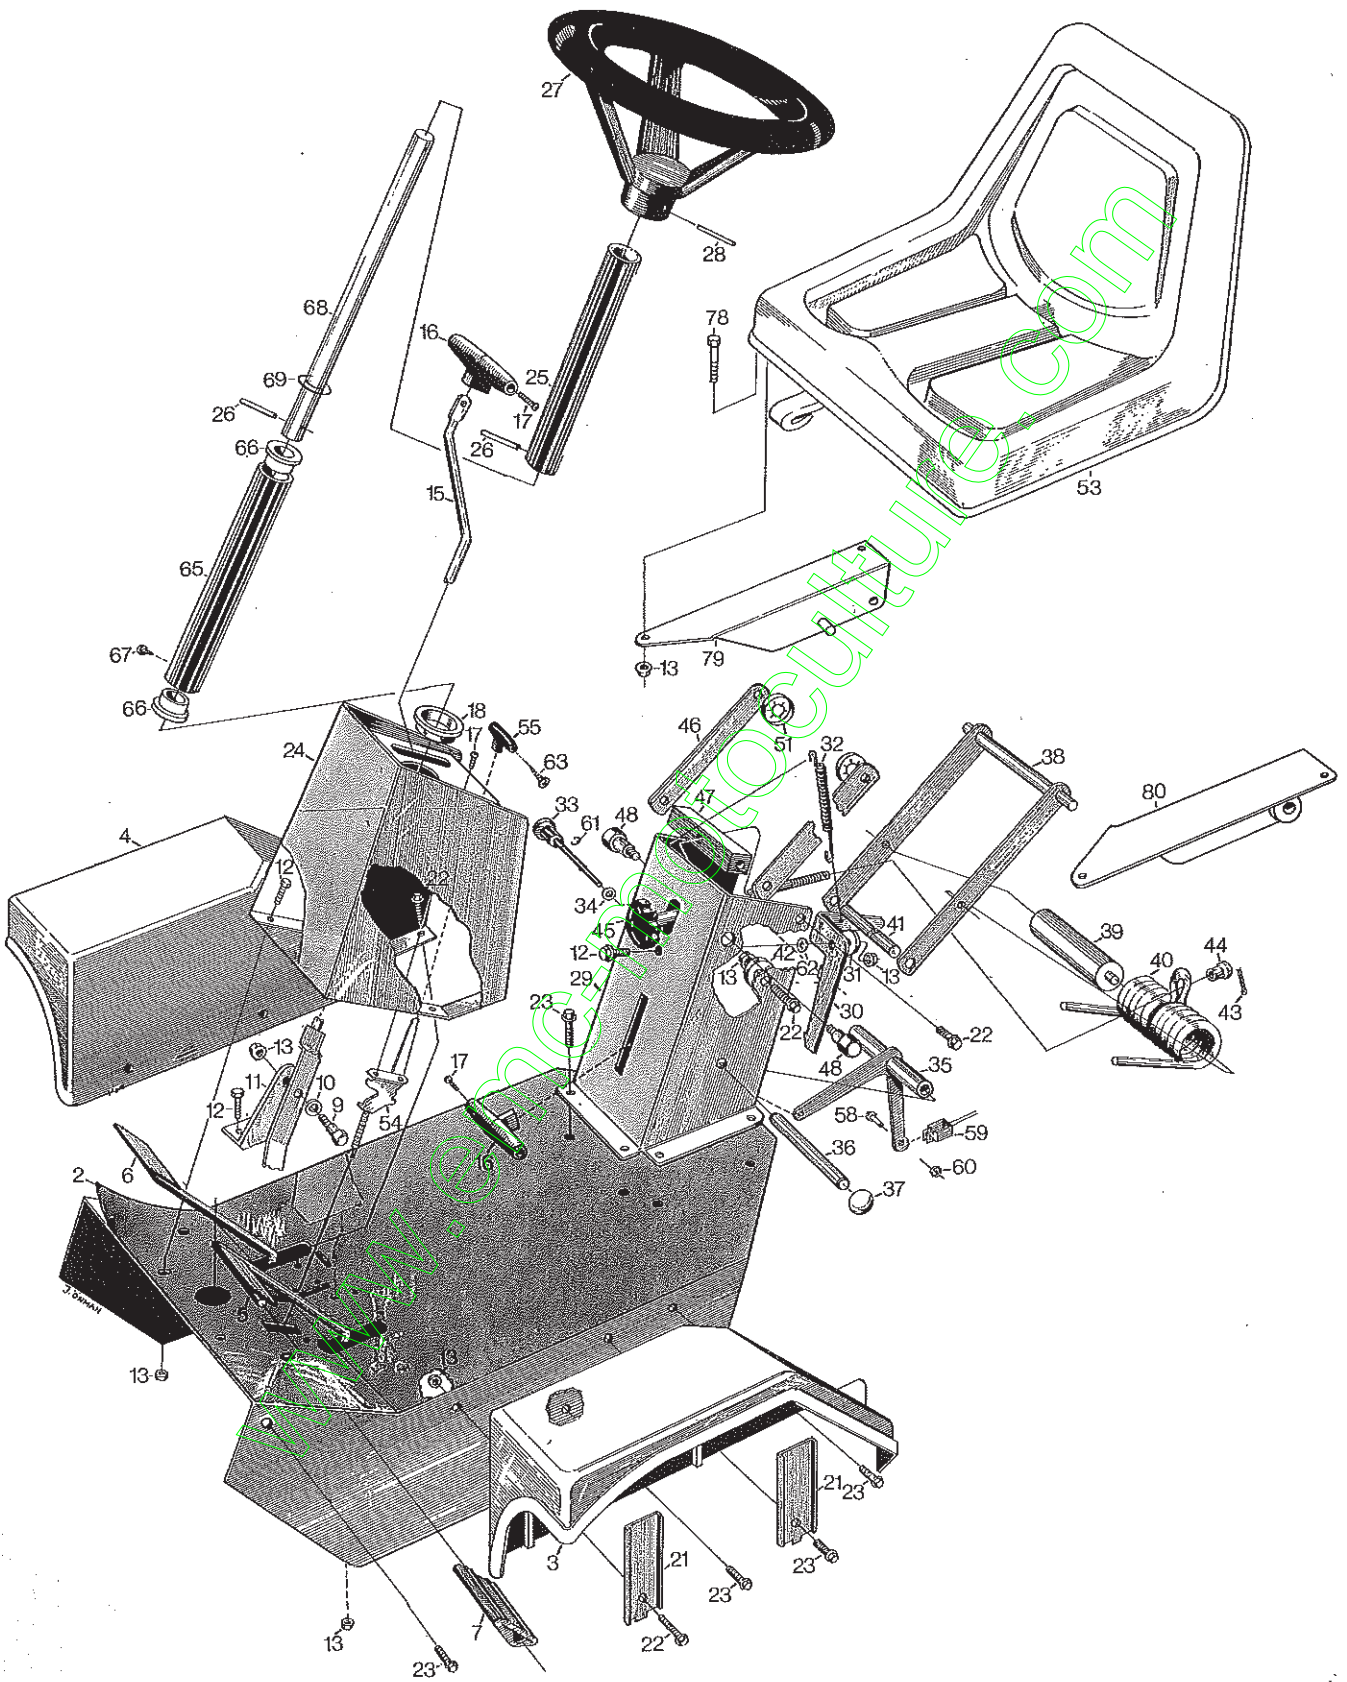

# PARK 3000 HYDRAULIC


## 1981

A

Bild nr.	Detalj nr.	Benämning
2	1134-1193-01	Durkmatta
3	1134-0197-00	Framskärm vä.
4	1134-0197-01	Framskärm hö.
5	1134-1221-01	Fotpedal vä.
6	1134-1221-02	Fotpedal hö.
7	1134-0269-00	Pedalgummi
9	1134-0240-00	Ansatsskruv
10	9696-0013-01	Bricka
11	1134-0220-01	Växelspaxkonsol
12	9959-0820-16	Skruv
13	9739-0831-22	Mutter
15	1134-1209-01	Växelspak
16	1134-0153-00	Handtag
17	9847-8016-16	Skruv
18	1134-0040-00	Rattstångslager
21	1134-0225-00	Stödplåt
22	9959-0816-16	Skruv
23	9942-0816-16	Skruv
24	1134-1218-01	Frontdekor
25	1134-1312-01	Rattrör, övre
26	9595-0270-00	Spännstift
27	1134-0252-00	Ratt
28	9595-0273-00	Spännstift
29	1134-0032-00	Sitskonsol
30	1134-0142-00	Låshake
31	1134-0143-00	Ansatsbricka
32	1131-1497-00	Fjäder
33	1134-0003-00	Urkopplingsspak
34	9699-0025-02	Bricka
35	1134-0027-01	Reglagespak
36	1134-0022-00	Reglagestång
37	9672-0004-02	Låsbricka
38	1134-1652-01	Fjäderstag
39	1134-0631-00	Sitsrör
40	1134-0015-00	Sitsfjäder
41	1134-0050-00	Sitsstång
42	1134-0070-00	Stopp
43	9599-0054-02	Saxsprint
44	1134-0493-00	Fjädermutter m. spännstift
45	1134-1386-01	Spännstång
46	1134-1650-01	Parallellstag
47	1134-0016-00	Mellanstag
48	1134-0020-00	Ansatsskruv
51	9675-0017-02	Låsbricka
53	1134-1801-01	Sits
54	1134-0778-05	Gasreglage
55	1111-0664-01	Reglageknopp
58	9646-0036-22	Nif
59	1134-0188-00	Kraftuttagswire
60	9675-0008-02	Låsbricka
61	9652-0005-04	Seegersäkkring
62	9695-0002-00	Bricka
63	9847-7713-16	Skruv
65	1134-1305-01	Rattrör, nedre
66	1134-1344-01	Lager
67	9849-8013-16	Skruv
68	1134-1307-01	Rattstång
69	9699-0103-02	Bricka
78	9997-0816-16	Skruv
79	1134-1687-01	Sitsfäste hö.
80	1134-1687-02	Sitsfäste vä.

# PARK 3000 HYDRAULIC 1981

B

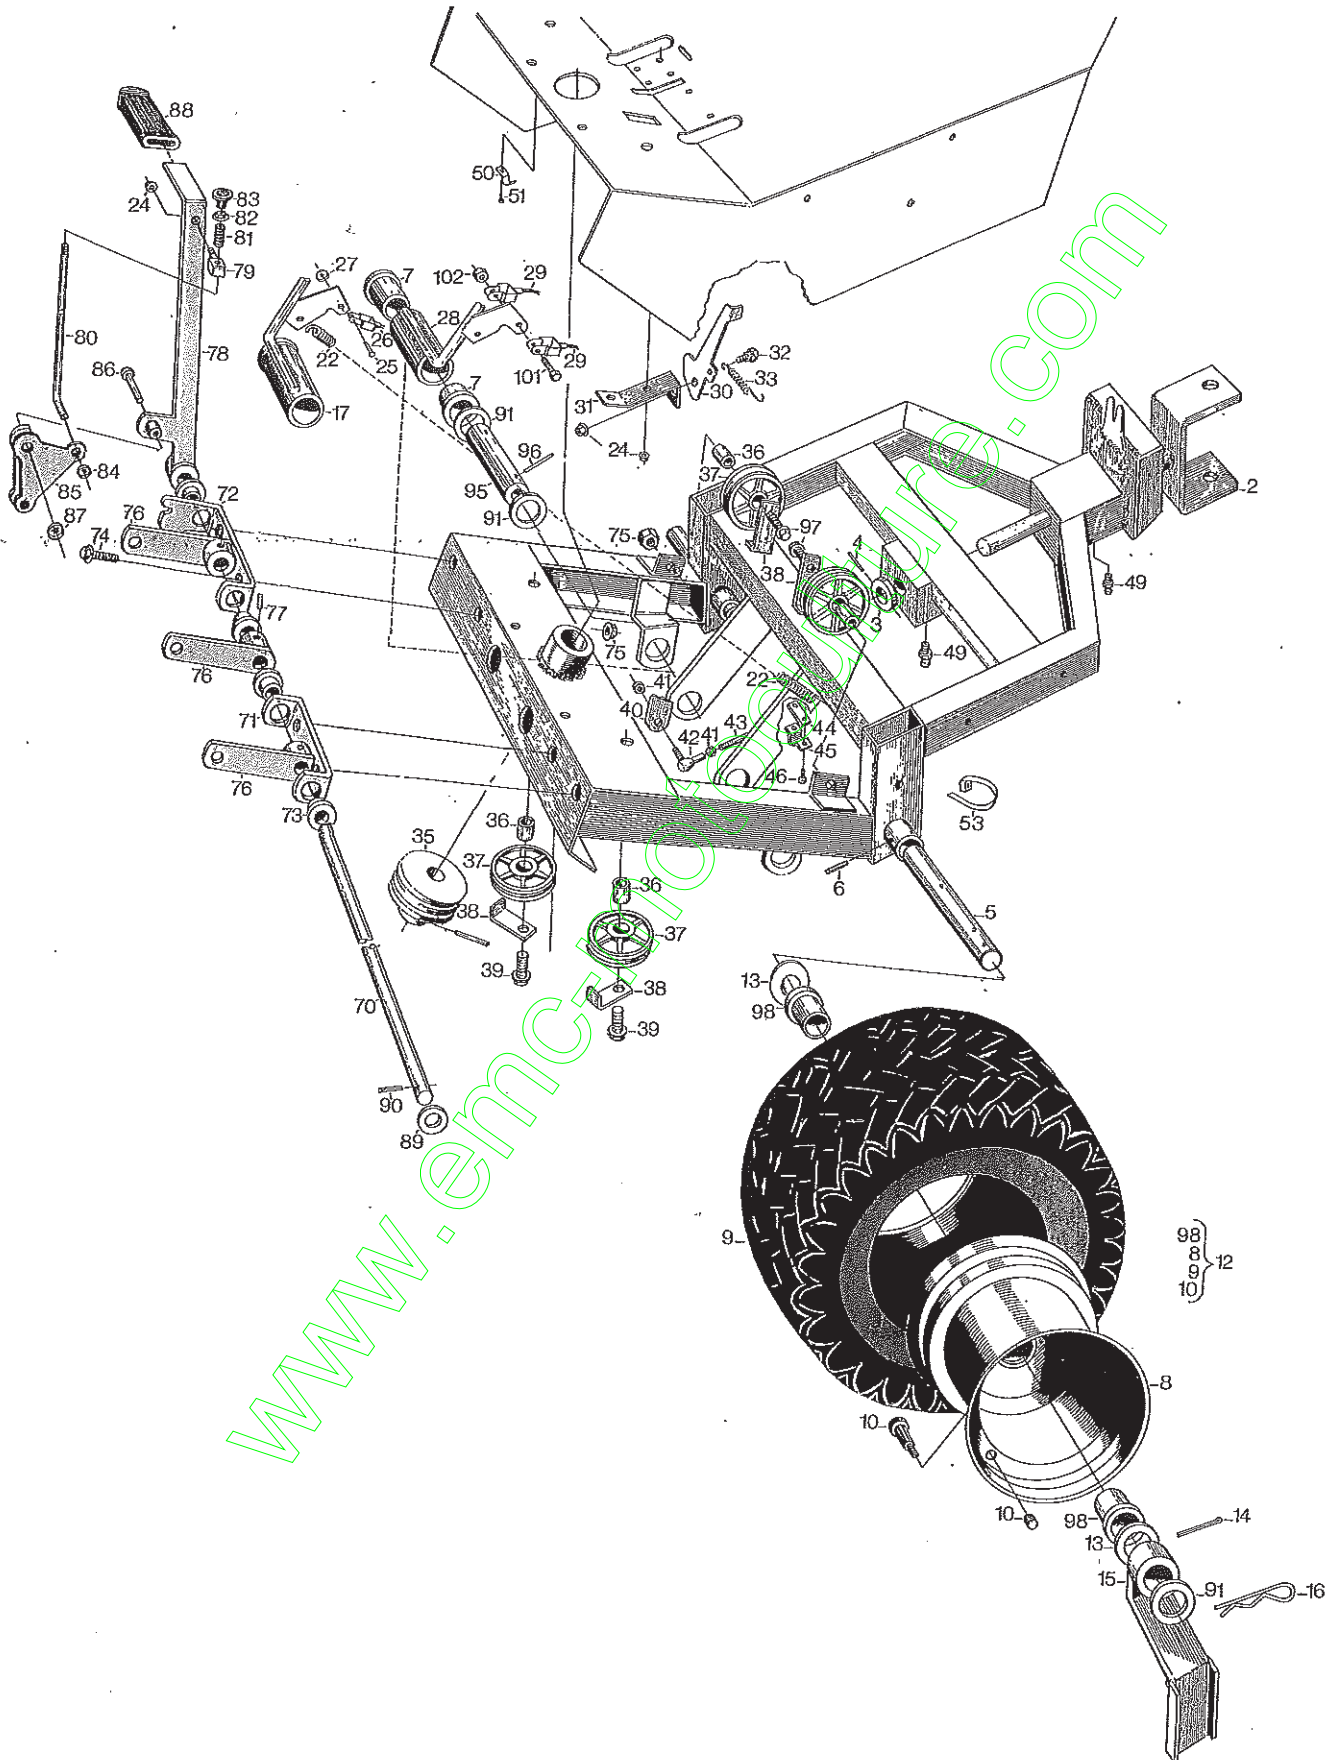


# PARK 3000 HYDRAULIC 1981

B

Bild nr.	Detalj nr.	Benämning	Bild nr.	Detalj nr.	Benämning
2	1134-1757-02	Midjegaffel	87	9675-0012-02	Låsbricka.
3	1134-0031-00	Ledaxelstopp	88	9403-0110-01	Handtag
4	9595-0270-00	Spännstift	89	9699-0047-02	Bricka
5	1134-0075-00	Framaxeltapp	90	9595-0510-00	Spännstift
6	9595-0258-00	Spännstift	91	9699-0042-02	Bricka
7	1134-0068-00	Framhjulslager	95	1134-1176-01	Lagerrör
8	1134-1318-01	Fälg	96	9595-0212-00	Spännstift
9	9545-0103-00	Däck	97	9997-1035-12	Skruv
10	9545-0500-00	Ventil	98	1134-1319-01	Lager
-	9545-0203-00	Innerslang (end. reservdel)	101	9997-0520-16	Skruv
12	1134-1317-01	Framhjul kpl. (8, 9, 10, 98)	102	9747-0531-02	Mutter
13	1134-0341-01	Bricka			
14	9599-0085-02	Saxsprint			
15	1134-1183-01	Fäste f. aggregat			
16	9598-0003-02	Låssprint			
17	1134-1221-01	Fotpedal vä. (koppling)			
22	1131-1506-00	Fjäder			
24	9739-0831-22	Mutter			
25	9646-0036-22	Nit			
26	1134-0226-00	Kopplingswire			
27	9675-0008-02	Låsbricka			
28	1134-1221-02	Fotpedal hö. (bröms)			
29	1134-0226-02	Bromswire			
30	1134-1185-01	Parkeringsbroms			
31	1134-1184-01	Stag			
32	1134-0245-00	Ansattsskruv			
33	1131-1497-00	Fjäder			
35	1134-1308-01	Styrskiva			
36	1134-0041-00	Linhjulshylsa			
37	1134-0072-00	Linhjul			
38	1134-0046-00	Linhållare			
39	9942-1030-16	Skruv			
40	1134-1209-01	Växelspak			
41	9739-0531-22	Mutter			
42	9570-0001-00	Vinkellänk			
43	1134-0280-00	Växelwire			
44	1134-0267-00	Underläggsbleck			
45	1134-0266-00	Fästbygel			
46	9941-0516-16	Skruv			
49	9501-0500-00	Smörjnippel			
50	9578-0010-00	Kabelklämma			
51	9941-0516-16	Skruv			
53	9579-0003-00	Buntband			
70	1134-0860-00	Lyftaxel			
71	1134-0527-00	Axelhållare			
72	1134-0536-00	Lyftsegment			
73	4711-0007-00	Lager			
74	9959-1020-16	Skruv			
75	9739-1031-22	Mutter			
76	1134-0857-00	Lyftarm			
77	9595-0258-00	Spännstift			
78	1134-0859-00	Lyftspak			
79	1134-0540-00	Fjäderstöd			
80	1134-0858-00	Tryckstång			
81	1111-0053-00	Tryckfjäder			
82	9739-0631-22	Mutter			
83	1134-0583-00	Plastknopp			
84	9675-0008-02	Låsbricka			
85	1134-0850-00	Låshake			
86	9646-0099-22	Nit			

# PARK 3000 HYDRAULIC 1981

C

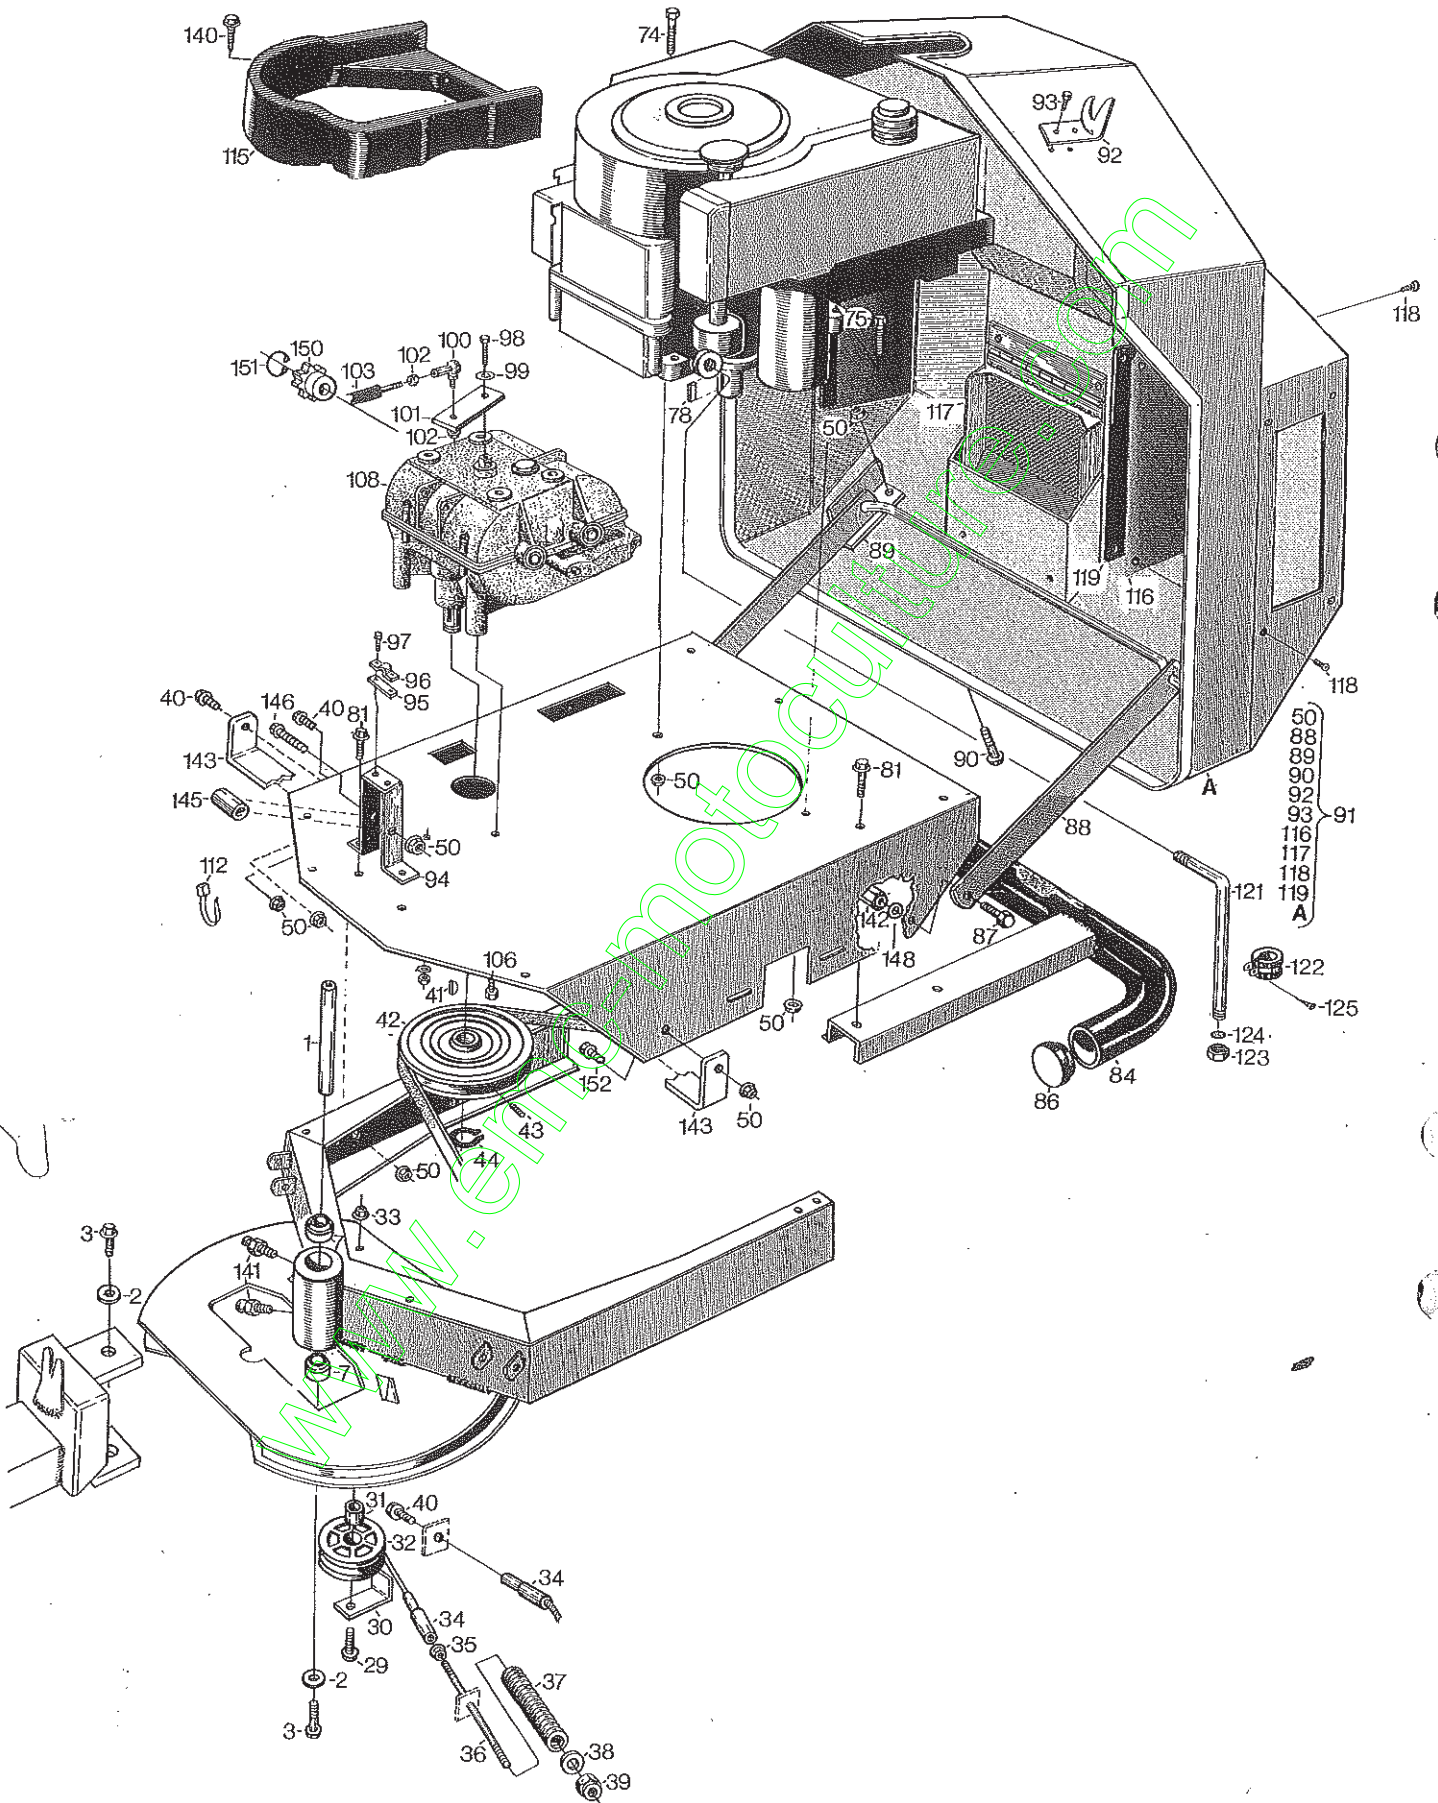


# PARK 3000 HYDRAULIC 1981

Bild nr.	Detalj nr.	Benämning	Bild nr.	Detalj nr.	Benämning
1	1134-0792-01	Centrumaxel	143	1134-1266-01	Stag
2	9699-0035-02	Bricka	145	1134-1338-01	Distans
3	9958-1020-16	Skruv	146	9997-0850-16	Skruv
7	9547-0001-00	Ledlager	148	9699-0028-02	Bricka
29	9997-1035-16	Skruv	150	1134-1655-01	Kedjehjul
30	1134-0046-00	Linhållare	151	P792072	Låsring
31	1134-0041-00	Linhjulshylsa	152	9959-0825-16	Skruv
32	1134-0072-00	Linhjul			
33	9739-1031-22	Mutter			
34	1134-0157-00	Styrwire			
35	9739-0831-22	Mutter			
36	1134-0042-00	Wiresträckare			
37	1134-1310-01	Tryckfjäder			
38	9699-0028-02	Bricka			
39	9747-0831-02	Mutter			
40	9959-0816-16	Skruv			
41	9600-0050-00	Woodruffkil			
42	1131-1204-00	Växellådsremskiva			
43	9913-3609-15	Skruv			
44	9650-0016-04	Seegersäkring			
50	9739-0831-22	Mutter			
74	9997-0840-16	Skruv			
75	9997-0835-12	Skruv			
78	9600-0250-00	Plattkil			
81	9942-0816-16	Skruv			
84	1134-0174-02	Kofångare			
86	9403-0015-70	Ändplugg			
87	1134-0240-00	Ansattsskruv			
88	1134-0189-01	Mellanstång			
89	1134-0199-01	Fäste för motorkåpa			
90	9898-0820-16	Skruv			
91	1134-0818-01	Motorkåpa kpl.			
92	1134-0264-00	Bygel för huvlås			
93	9849-7909-16	Skruv			
94	1134-0184-00	Wirebygel			
95	1134-0267-00	Underläggsbleck			
96	1134-0266-00	Fästbygel			
97	9941-0516-16	Skruv			
98	9987-5016-16	Skruv			
99	9699-0026-02	Bricka			
100	9570-0001-00	Vinkellänk			
101	1134-0232-00	Växelarm			
102	9739-0531-22	Mutter			
103	1134-0280-00	Växelwire			
106	9954-3619-16	Skruv			
108	9500-9915-00	Växellåda			
112	9579-0003-00	Buntband			
115	1134-1195-01	Tätningsskudde			
116	1134-0989-01	Luftfilter			
117	1134-0469-01	Lucka			
118	9849-8013-16	Skruv			
119	1134-0088-02	Fästplåt			
121	1134-1341-01	Oljeavtappningsrör			
122	1134-0994-01	Rörklammer			
123	1134-0995-01	Plugg			
124	1134-0997-01	Fiberpackning			
125	9815-8013-16	Skruv			
140	9815-8013-16	Skruv			
141	9501-0500-00	Smörjnippel			
142	1134-1236-01	Stag			

# PARK 3000 HYDRAULIC 1981

D

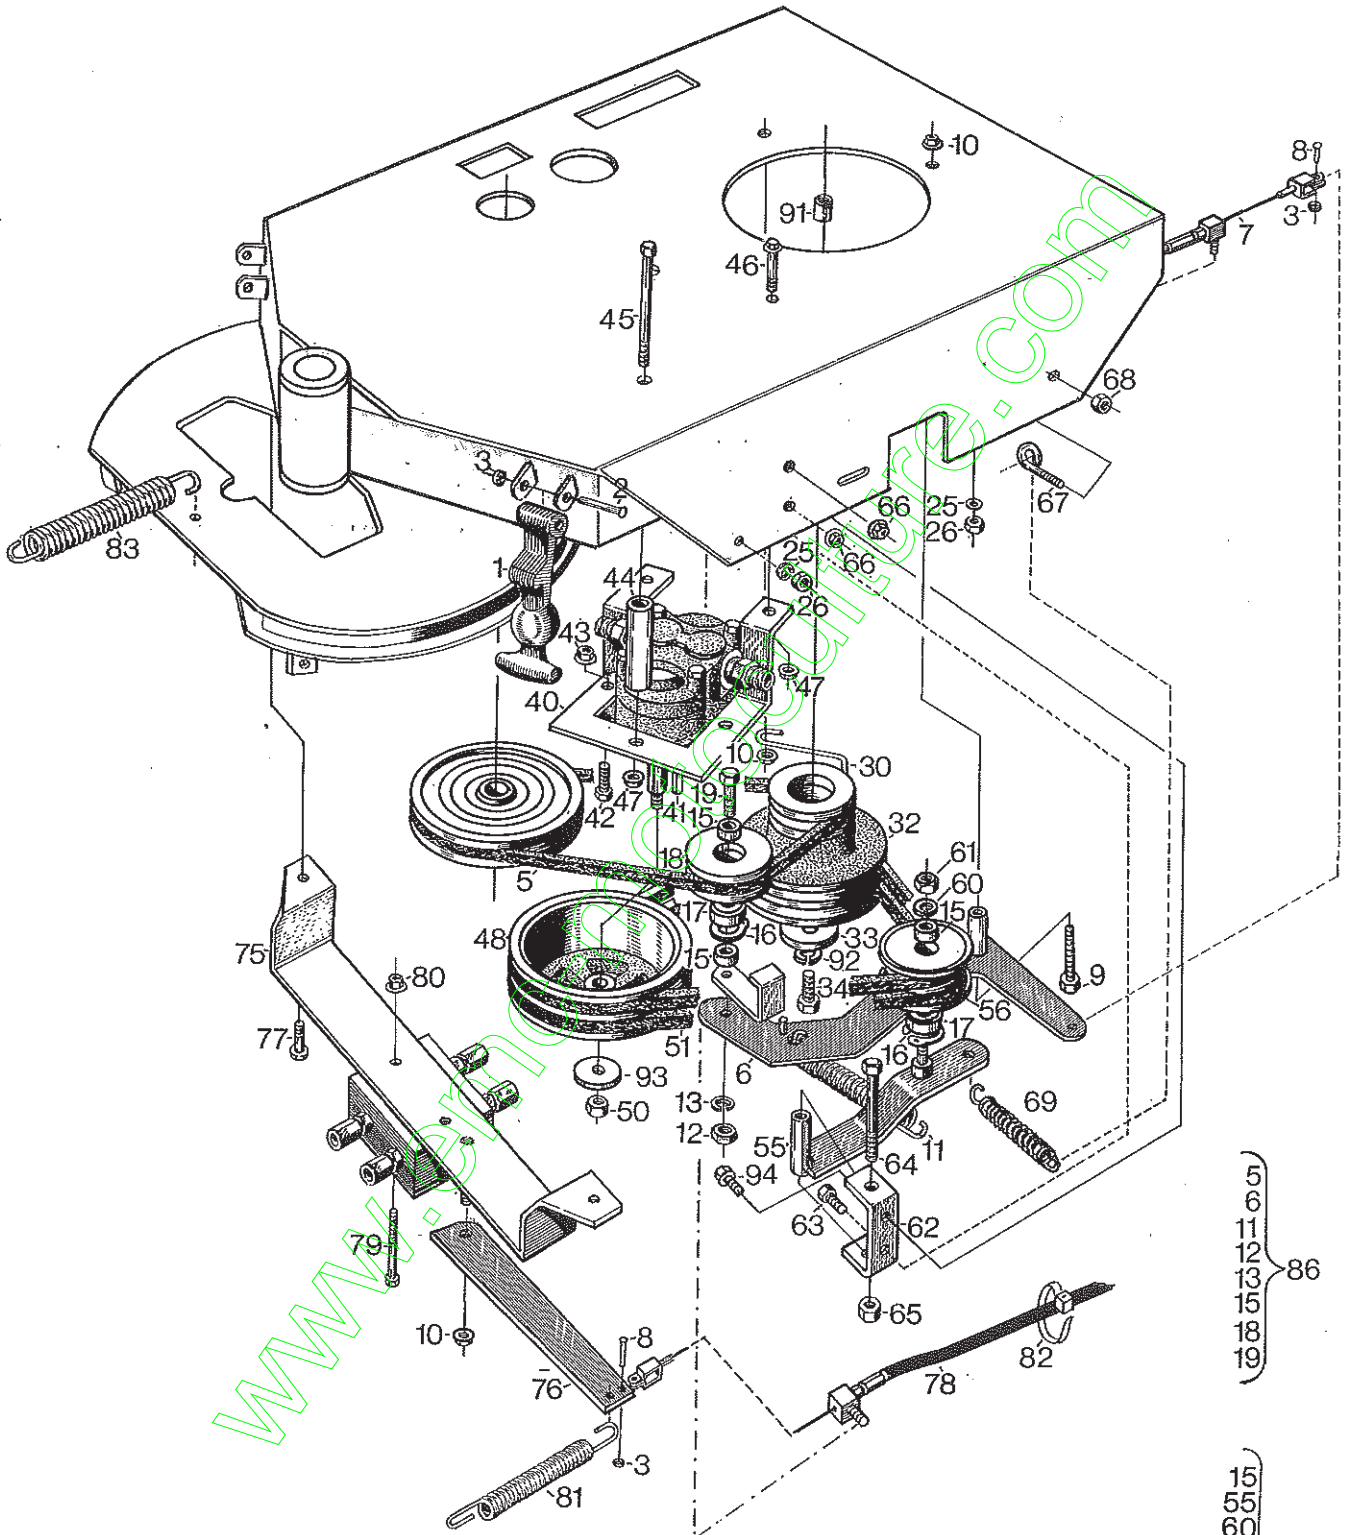

- 5
  - 6
  - 11
  - 12
  - 13
  - 15
  - 18
  - 19
- 86

- 15
  - 55
  - 60
  - 61
  - 62
  - 63
  - 64
  - 65
  - 56
- 88


# PARK 3000 HYDRAULIC 1981

D

Bild nr.	Detalj nr.	Benämning.
1	1134-0262-00	Huvlås
2	9646-0053-22	Nit
3	9675-0008-02	Låsbricka
5	9585-0050-00	Kilrem <i>B02-3-0</i>
6	1134-1340-01	Spännbåge
7	1134-0226-00	Kopplingswire
8	9646-0036-22	Nit
9	9997-0850-16	Skruv
10	9739-0831-22	Mutter
11	1134-0645-00	Kopplingsfjäder
12	9794-5231-02	Mutter
13	9683-0040-02	Bricka <i>22-3-3</i>
15	1131-1509-00	Distans
16	9653-0010-04	Seegersäkring
17	9549-0004-00	Kullager
18	1134-0782-00	Spännrulle kpl. (16, 17)
19	9987-5238-12	Skruv
25	9677-0006-02	Bricka
26	9739-0631-22	Mutter
30	1134-0139-00	Rembygel
32	1134-0788-01	Motorremskiva
33	1134-0047-01	Axelbricka
34	9987-5332-16	Skruv
40	1134-0823-00	Pumpkonsol
41	9600-0120-00	Plattkil
42	9959-0825-16	Skruv
43	9739-0831-22	Mutter
44	1134-0838-00	Distans
45	9997-0890-12	Skruv
46	9959-0820-16	Skruv
47	9739-0831-22	Mutter
48	1134-0790-00	Pumpremskiva
50	9743-3721-32	Mutter
51	9585-0110-00	Kilrem
55	1134-0836-00	Spännarm
56	1134-0781-00	Kraftuttagsspännrulle kpl. (16, 17)
60	9683-0040-02	Bricka
61	9799-1031-02	Mutter
62	1134-0837-00	Spännarmsfäste
63	9959-0825-16	Skruv
64	9997-0870-12	Skruv
65	9747-0831-02	Mutter
66	9739-0831-22	Mutter
67	9809-0002-00	Skruvögla
68	9795-3531-02	Mutter
69	1134-1299-01	Fjäder
75	1134-0882-00	Ventilkonsol
76	1134-0861-00	Avstängningsarm
77	9942-0816-16	Skruv
78	1134-0188-00	Kraftuttagswire
79	9997-0650-12	Skruv
80	9739-0631-22	Mutter
81	1134-0906-00	Fjäder
82	9579-0004-00	Kabelhållare
83	1134-0564-00	Fjäder
86	1134-0602-01	Spännbåge kpl.
88	1134-0889-00	Spännarm kpl.
91	1134-1364-02	Distans
92	9683-0045-02	Bricka
93	1134-0047-00	Axelbricka
94	9959-0820-16	Skruv



# PARK 3000 HYDRAULIC 1981

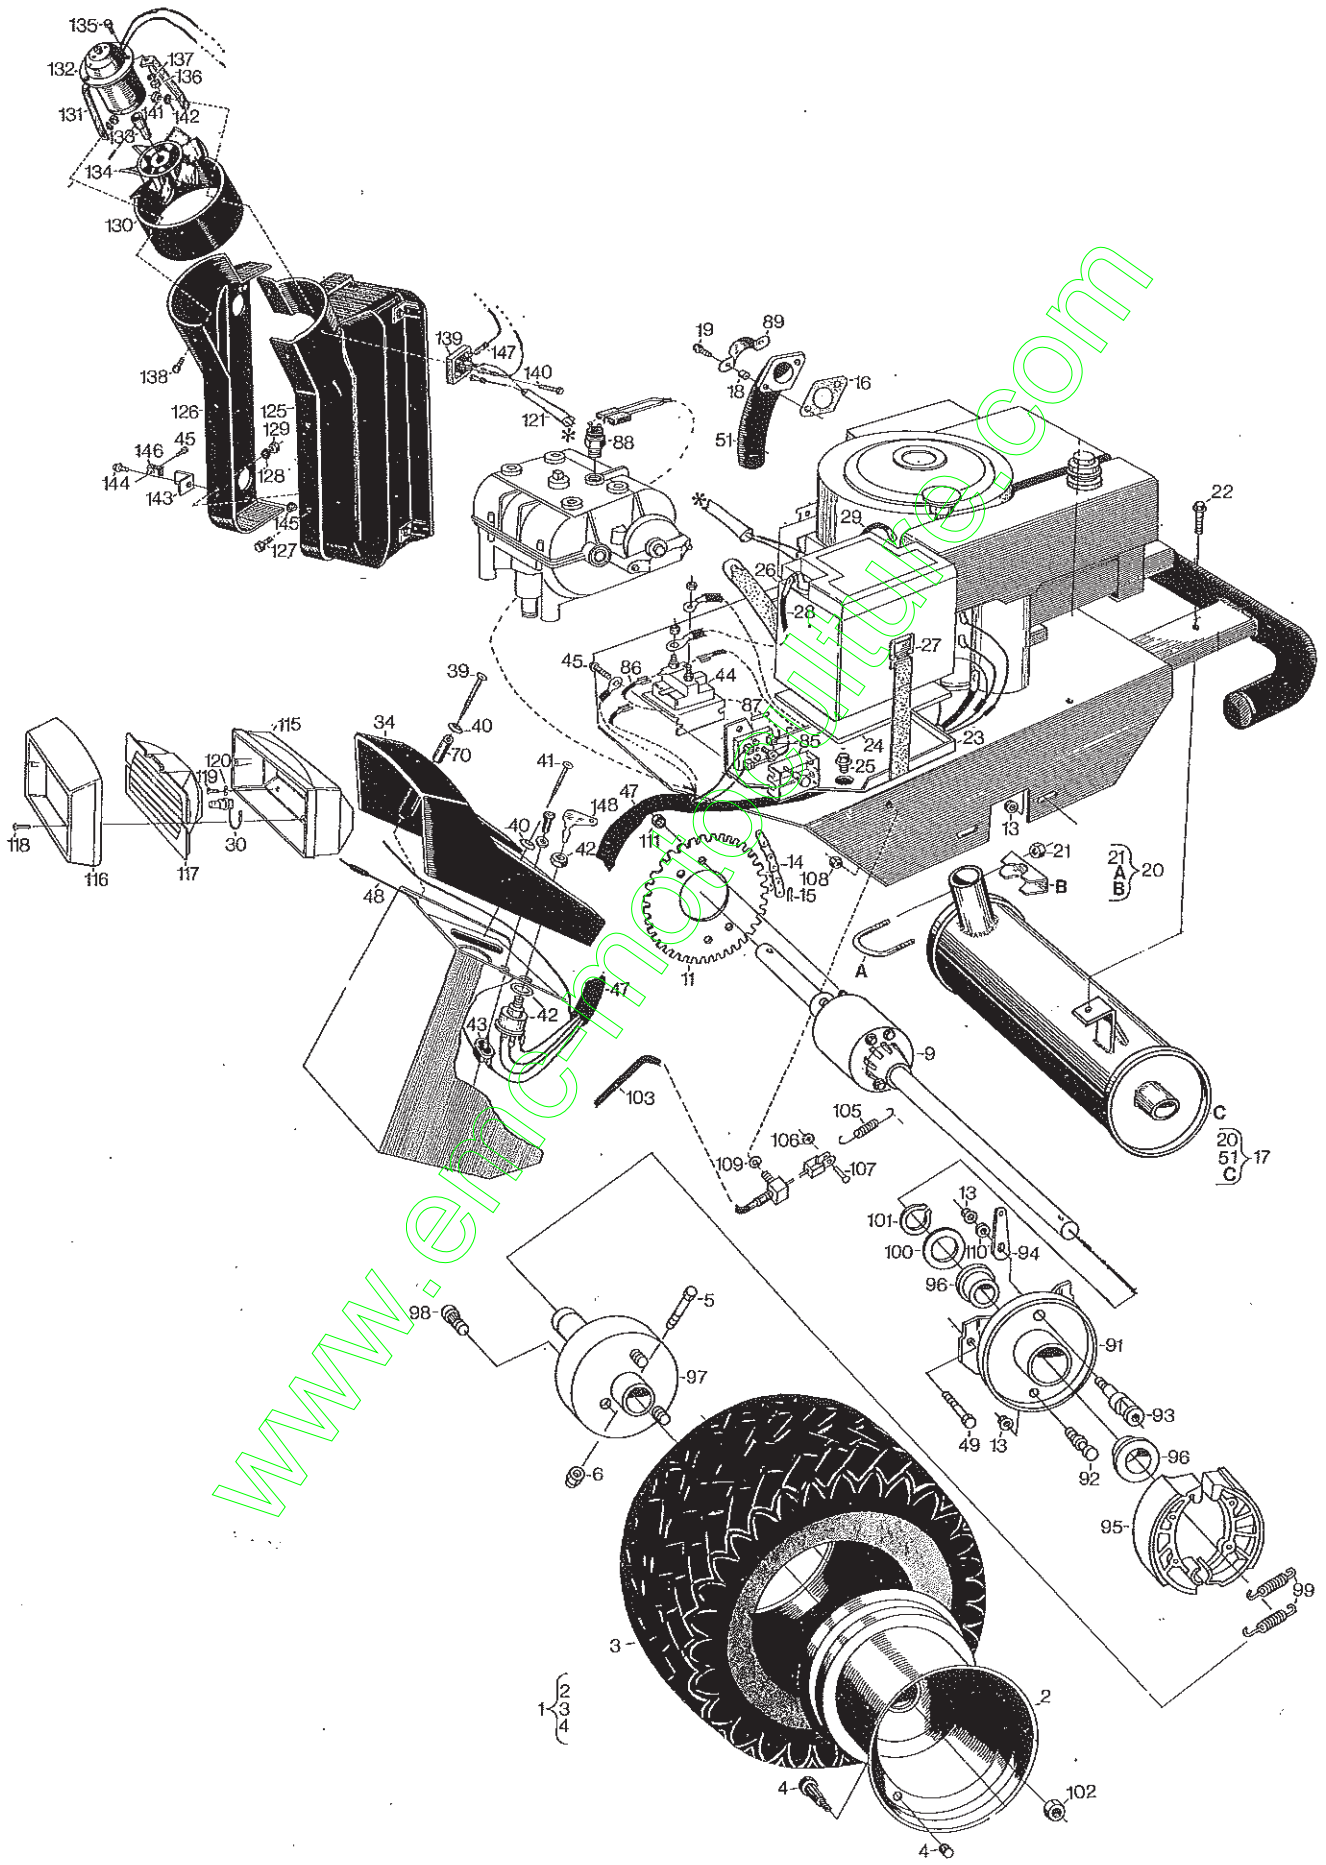


# PARK 3000 HYDRAULIC 1981

E

Bild nr.	Detalj nr.	Benämning	Bild nr.	Detalj nr.	Benämning
1	1134-1289-01	Bakhjul kpl.	108	9739-0631-22	Mutter
2	1134-1253-01	Fälg	109	9677-0006-02	Bricka
3	9545-0103-00	Däck	110	9699-0028-02	Bricka
4	9545-0500-00	Ventil	111	9795-3631-02	Mutter
5	1134-1348-01	Skruv	115	1134-1543-01	Lamphus
6	9743-3721-32	Mutter	116	1134-1410-01	Sarg
9	1134-1694-01	Bakaxel med diff.	117	1134-1411-01	Strålkastare
11	1134-1691-01	Kedjehjul	118	9847-7922-16	Skruv
13	9739-0831-22	Mutter	119	9847-8014-16	Skruv
14	9589-0010-03	Kedja kpl. (15)	120	9699-0099-02	Bricka
15	9589-0504-00	Kedjelås	121	1134-0992-01	Kabel
16	1134-0433-00	Ljuddämparpackning <i>RO3-4-3</i>	125	1134-0977-01	Fläkthus övre
17	1134-0450-00	Ljuddämpare kpl.	126	1134-0977-02	Fläkthus undre
18	1134-0345-00	Distans f. ljuddämpare <i>B 08-4-4</i>	127	9997-0412-16	Skruv (ersätter popnit)
19	9988-3632-12	Skruv <i>B 08-4-5</i>	128	9699-0002-02	Bricka för d:o
20	9578-0011-00	Ljuddämparklämma	129	9799-0431-02	Mutter för d:o
21	9799-0831-02	Mutter	130	1134-0978-01	Ståiring
22	9942-0816-16	Skruv	131	1134-0979-01	Motorfäste
23	1134-1174-01	Batterihylla	132	1134-0980-01	Elmotor
24	1134-1201-01	Batteriunderlägg	133	1134-0981-01	Axelförlängning
25	9942-0612-16	Skruv	134	1134-0969-01	Fläkt
26	1134-0498-00	Batteri	135	9997-0412-16	Skruv
27	9400-0064-00	Batterihållare	136	9799-0431-02	Mutter
28	1134-0234-00	Batterikabel(+)	137	9683-0010-02	Bricka
29	1131-1455-00	Batterikabel(-)	138	9997-0512-16	Skruv
30	9400-0075-00	Glödlampa	139	1134-0970-01	Diodbrygga
34	1134-1212-02	Instrumentpanel	140	9997-0522-12	Skruv
39	9813-0060-00	Skruv	141	9799-0531-02	Mutter
40	9674-0001-00	Skyddsbricka	142	9683-0015-02	Bricka
41	9843-8022-16	Skruv	143	1134-0079-01	Vinkelfäste
42	1134-1073-01	Tändningslås kpl. (148)	144	9959-0612-16	Skruv
43	9400-0063-00	Strömbrytare	145	9739-0631-22	Mutter
44	9400-0070-00	Solenoid	146	9673-0001-00	Snabblåsmutter
45	9849-8013-00	Skruv	147	9400-0096-00	Flåtstiftshylsa
47	1134-1260-01	Kabelhärva	148	9400-0025-01	Nyckel
48	1113-0078-04	Kabel	-	9545-0203-00	Innerslang (end. reservdel)
49	9959-0820-16	Skruv	-	9402-2173-00	Dekal för gasreglage
51	1134-0556-00	Avgasrör	-	9402-2174-00	Dekal för instr. panel
70	1111-0378-00	Distans	-	9402-2177-00	Dekal för växelläge
85	9400-0103-00	Säkringshållare			
86	1134-1199-01	Kabel			
87	9400-0102-00	Säkring			
88	9400-0105-00	Strömbrytare			
89	1134-1328-01	Låsbleck <i>CO-4-2</i>			
91	1134-1693-01	Bromssköld			
92	1134-1465-01	Styrtapp			
93	1134-1282-01	Bromsnock			
94	1134-1237-01	Bromsarm			
95	1134-1542-01	Bromsback kpl.			
96	9548-0020-00	Oljebrons-lager			
97	1134-1250-02	Bromstrumma			
98	1134-1262-01	Hjulbult			
99	1134-1257-01	Fjäder			
100	1134-1244-01	Bricka			
101	9650-0035-04	Seegerssäkring			
102	1134-1263-01	Hjulumutter			
103	1134-0226-02	Bromswire			
105	1134-1242-01	Fjäder			
106	9675-0008-02	Låsbricka			
107	9646-0036-22	Nit			

# PARK 3000 HYDRAULIC 1981

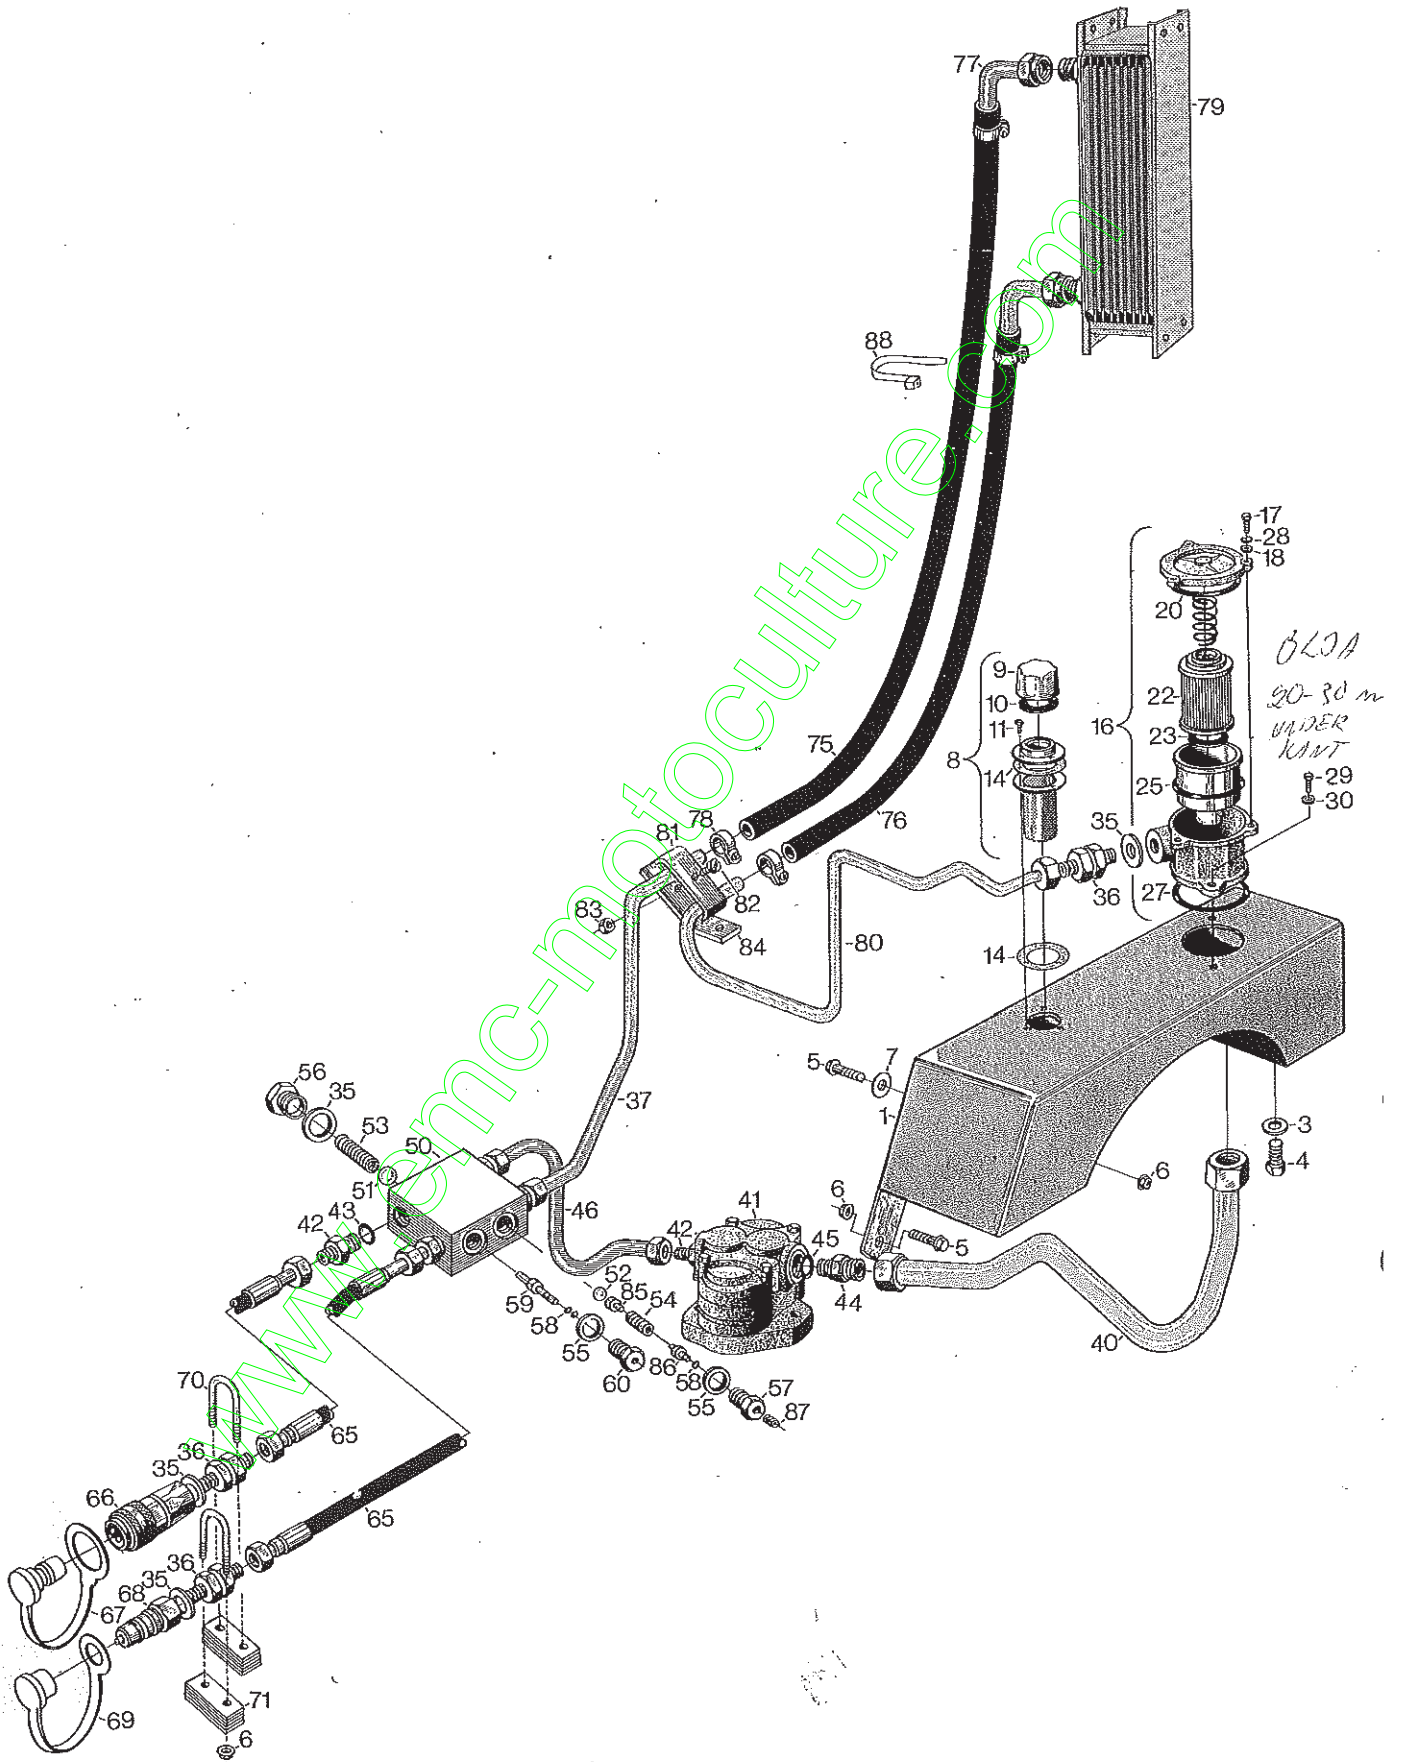


# PARK 3000 HYDRAULIC 1981

Bild nr.	Detalj nr.	Benämning	Bild nr.	Detalj nr.	Benämning
1	1134-0111-01	Tank	85	1134-0297-01	Kulstål
3	1134-0158-01	Kopparbricka	86	1134-0301-01	Fjäderstöd
4	1134-0159-01	Skruv	87	9915-0808-15	Skruv
5	9959-0825-16	Skruv	88	9579-0004-00	Buntband
6	9739-0831-22	Mutter			
7	9699-0062-02	Bricka			
8	1134-0121-01	Lock kpl.			
9	1134-0171-01	Lock			
10	1134-0172-01	Packning			
11	9865-0510-16	Skruv			
14	1134-0180-01	Packning			
16	1134-0120-01	Oljefilter kpl.			
17	9997-0522-16	Skruv			
18	9699-0025-02	Bricka			
20	1134-0151-01	O-ring			
22	1134-0138-01	Oljefilter			
23	1134-0190-01	Packning			
25	1134-0192-01	O-ring			
27	1134-0194-01	O-ring			
28	9683-0025-02	Bricka			
29	9997-0616-16	Skruv			
30	9683-0025-02	Bricka			
35	1134-0114-01	Bricka			
36	1134-0089-01	Koppling			
37	1134-0126-01	Returrör			
40	1134-0125-01	Sugledning			
41	1134-0689-00	Hydraulpump			
42	1134-0115-01	Koppling			
43	1134-0152-01	O-ring			
44	1134-0116-01	Koppling			
45	1134-0154-01	O-ring			
46	1134-0128-01	Tryckrör			
50	1134-0971-03	Ventilblock			
51	1134-0156-01	Stålkula			
52	1134-0155-01	Stålkula			
53	1134-0110-01	Tryckfjäder			
54	1134-0109-01	Tryckfjäder			
55	1134-0117-01	Bricka			
56	1134-0104-01	Plugg			
57	1134-0105-01	Plugg			
58	1134-0144-01	O-ring			
59	1134-0103-01	Manöverknapp			
60	1134-0106-01	Plugg			
65	1134-0096-01	Hydraulslang			
66	1134-0112-01	Snabbkoppling handel			
67	1134-0118-01	Honskydd			
68	1134-0113-01	Snabbkoppling handel			
69	1134-0119-01	Honskydd			
70	1134-0842-00	Fäste			
71	1134-0843-00	Underlägg			
75	1134-0135-01	Slang			
76	1134-0136-01	Slang			
77	1134-0137-01	Nippel			
78	1134-0988-01	Slangklammer			
79	1134-0982-01	Oljekylare			
80	1134-0134-01	Returrör			
81	1134-0993-01	Rörklammer			
82	9959-0620-16	Skruv			
83	9739-0631-22	Mutter			
84	1134-0999-01	Fästvinkel			

# PARK 3000 HYDRAULIC 1981

G

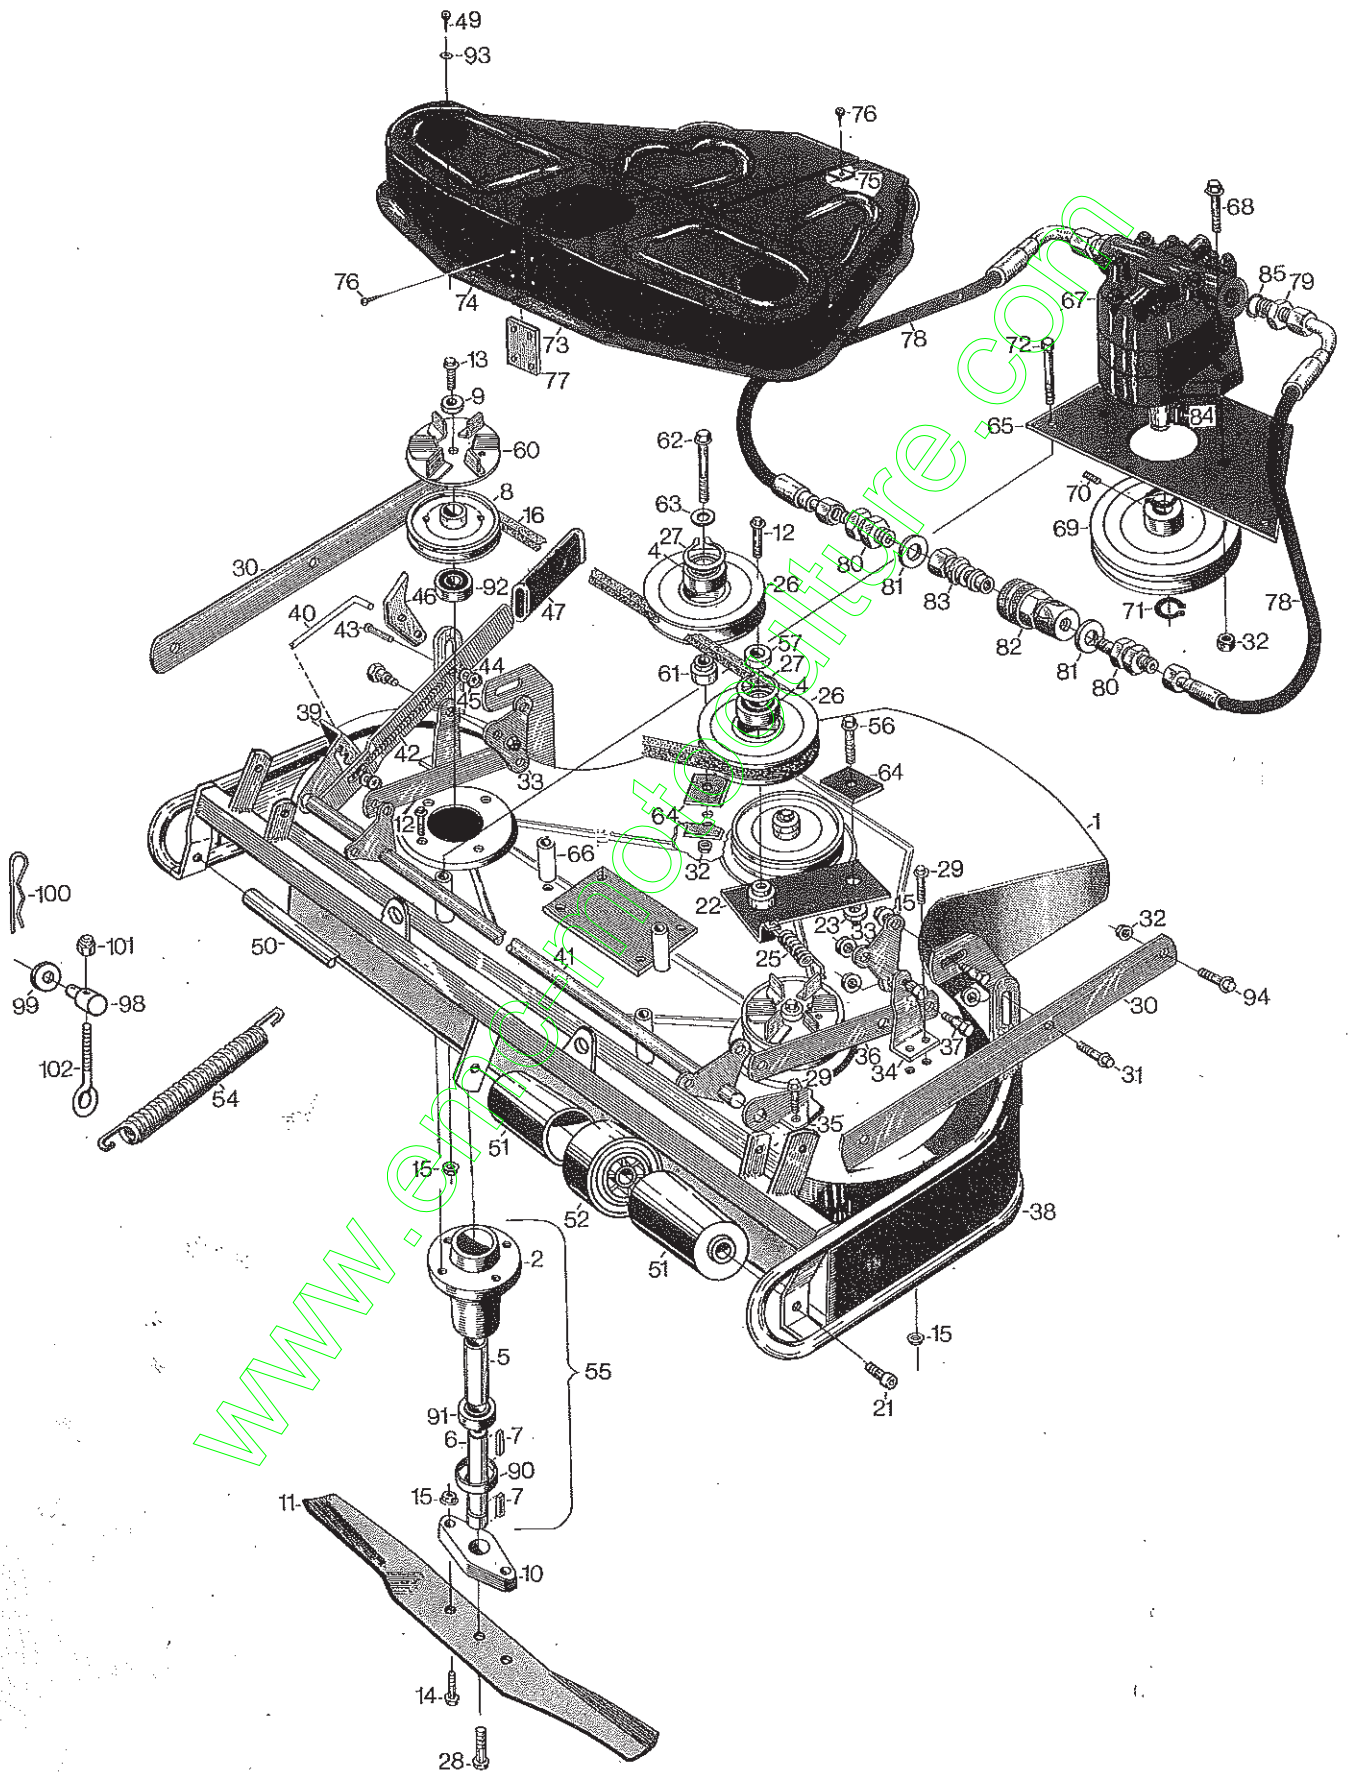

# PARK 3000 HYDRAULIC 1981

G

Bild nr.	Detalj nr.	Benämning	Bild nr.	Detalj nr.	Benämning
1	1134-0799-00	Kåpa	71	9650-0017-04	Seegersäkkring
2	1134-0401-01	Lagerbox	72	9997-0860-16	Skruv
4	9549-0017-00	Kullager	73	1134-0201-01	Transmissionskåpa V
5	1134-0051-05	Distans	74	1134-0202-01	Transmissionskåpa H
6	1134-0397-01	Knivaxel	75	9673-0001-00	Snabbblåsmutter
7	1134-0323-00	Plattkil	76	9847-8009-16	Skruv
8	1134-0286-01	Remskiva	77	1134-0879-00	Fästplatta
9	9699-0056-02	Bricka	78	1134-0097-01	Hydraulslang
10	1134-0300-00	Knivfäste	79	1134-0115-01	Koppling
11	1134-0456-00	Kniv	80	1134-0089-01	Koppling
12	9942-0816-16	Skruv	81	1134-0114-01	Bricka
13	9958-0820-16	Skruv	82	1134-0112-01	Snabbkoppling handel
14	9959-0830-16	Skruv	83	1134-0113-01	Snabbkoppling handel
15	9739-0831-22	Mutter	84	9600-0143-00	Plattkil
16	9585-0111-00	Kilrem	85	1134-0152-01	O-ring
21	9939-1016-16	Skruv	90	1134-0400-01	Täckbricka
22	1134-0325-00	Spännarm	91	9549-0020-00	Kullager
23	1131-1684-00	Spännarmsdistans	92	9549-0019-00	Kullager
25	1134-0327-00	Kåpfjäder	93	9699-0024-02	Bricka
26	1134-0698-00	Kåpspännrulle kpl. (4, 27)	94	9997-1035-12	Skruv
27	9651-0035-04	Seegersäkkring	98	1134-0576-00	Länksprint
28	9958-1020-16	Skruv	99	9699-0035-02	Bricka
29	9959-0816-16	Skruv	100	9598-0003-02	Låssprint
30	1134-0369-00	Fäststag	101	9743-3621-32	Mutter
31	9959-1025-16	Skruv	102	1134-0414-01	Skruvögla
32	9739-1031-22	Mutter			
33	1134-0340-01	Pivotplatta			
34	1134-0328-00	Kåpkonsol			
35	1134-0312-00	Parallellstagsfäste			
36	1134-1325-01	Stag f. höjdist.			
37	1134-0240-00	Ansattsskruv			
38	1134-1271-02	Ram kpl.			
39	1134-0457-00	Höjdiställningssegment			
40	1134-0343-00	Höjdiställningsslid			
41	1134-0425-00	Parallellaxel			
42	1134-0361-00	Fjäder			
43	9646-0064-22	Nit			
44	9699-0025-02	Bricka			
45	9675-0009-02	Låsbricka			
46	1134-1326-01	Reglageöra			
47	1134-1069-01	Handtag			
49	9849-8013-16	Skruv			
50	1134-0304-03	Axel			
51	1134-0299-00	Skyddsruille			
52	1134-0305-00	Kåphjul			
54	1134-0463-00	Fjäder			
55	1134-0428-01	Lagerbox kpl.			
56	9997-0820-16	Skruv			
57	9699-0062-02	Bricka			
60	1134-0880-00	Fläkt			
61	1134-0224-00	Spännhjulsdistans			
62	9997-1040-12	Skruv			
63	9699-0035-02	Bricka			
64	1134-0402-00	Spännhjulspåt			
65	1134-0806-00	Motorfäste			
66	1134-0706-00	Distans			
67	1134-0692-00	Hydraulmotor			
68	9959-1030-16	Skruv			
69	1134-0793-00	Remskiva			
70	9907-0610-16	Skruv			